



AirPrime Conversion Kit P/N 27.005.2

Converts Manual AirPrime System From 1 ▶ 2 Locations

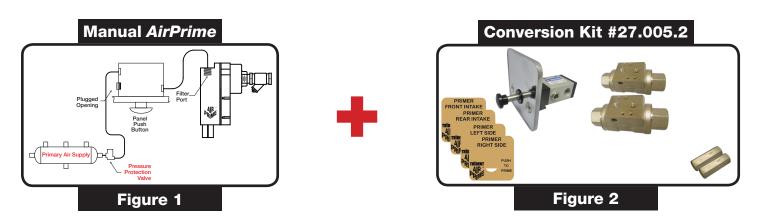



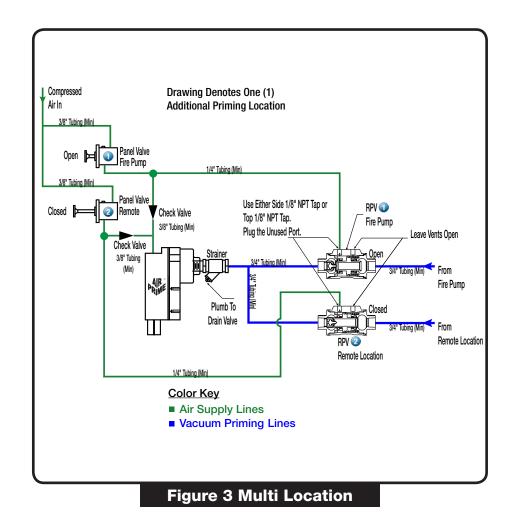

AirPrime Conversion Kit P/N 27.005.2

Installation Instructions

- 1. Find a place on the pump panel (Preferably close to the existing PUMP priming push-button) to add the second push-button for the second priming location. Use the template cut-out shown in **Figure 4** to mount the second push button to the panel. Add the appropriate gold label, from those supplied in kit, for the second priming location.
- 2. Locate the existing Manual *AirPrime* unit within pump enclosure. It can be found by tracing the existing air line from the PUMP primer push-button control on the pump panel to the TOP of the *AirPrime* unit (See **Figure 1**). Verify that the unit is already mounted ABOVE the highest priming point in suction piping (Including the new second priming location), if not move it higher.
- 3. Remove the ³/₄" line attached to the WYE strainer at the *AirPrime* unit's inlet. Install a ³/₄" TEE in its place and plumb the (2) RPVs as shown in the BLUE lines of **Figure 3**. Use ³/₄" inside diameter non-collapsible hose for these lines. Note that flow direction arrow cast on RPVs must point toward the *AirPrime* unit. Also note the RPVs must also be mounted higher than the highest priming point in the suction plumbing.
- 4. Remove the existing airline and tubing fitting located on the top of the *AirPrime* unit. Add a TEE to the top of the primer and plumb the two (2) push-buttons, two (2) check valves, two (2) RPVs and airlines as shown in GREEN In Figure 3. Be sure air flow direction, as marked on check valves, is correct. Use a minimum of ³/₆" OD tubing from the air supply to the push-buttons and from the push-buttons to the *AirPrime* unit. Use a minimum of ¹/₄" OD tubing for the two (2) air actuation lines to the two (2) RPVs. NOTE: All tubing shall be rated for air brake usage and be installed in a manner free from kinks and to avoid sharp edges.

Installation Notes for Multi-Location Priming Systems

- 1. Manual System: Follow the instructions shown in Figure 4 for mounting the additional control on the pump panel.
- 2. Manual System: Refer to schematic in Figure 3 on Page 1 for air and suction plumbing.
- 3. For the additional priming location, mount a push-button control as shown in Figure 5.
- 4. Gold labels are provided for LEFT, RIGHT, FRONT, REAR remote priming locations as shown in Figure 2 on Page 1.
- 5. See Figure 6 and Figure 7 to note "arrows" on the Check Valves and RPVs are in the proper flow direction.


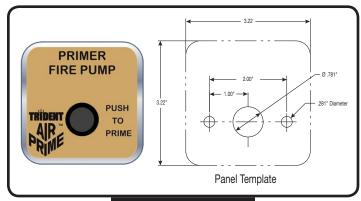


Figure 4



Trident Emergency Products, LLC 2940 Turnpike Drive | Suite #9 | Hatboro, Pennsylvania 19040

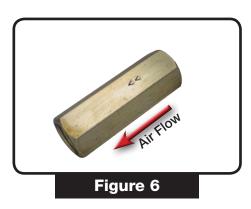

215-293-0700 - 215-293-0701 sales@tridentdirect.com Revised 08/04/2015